


How to install the propeller

Step # 9

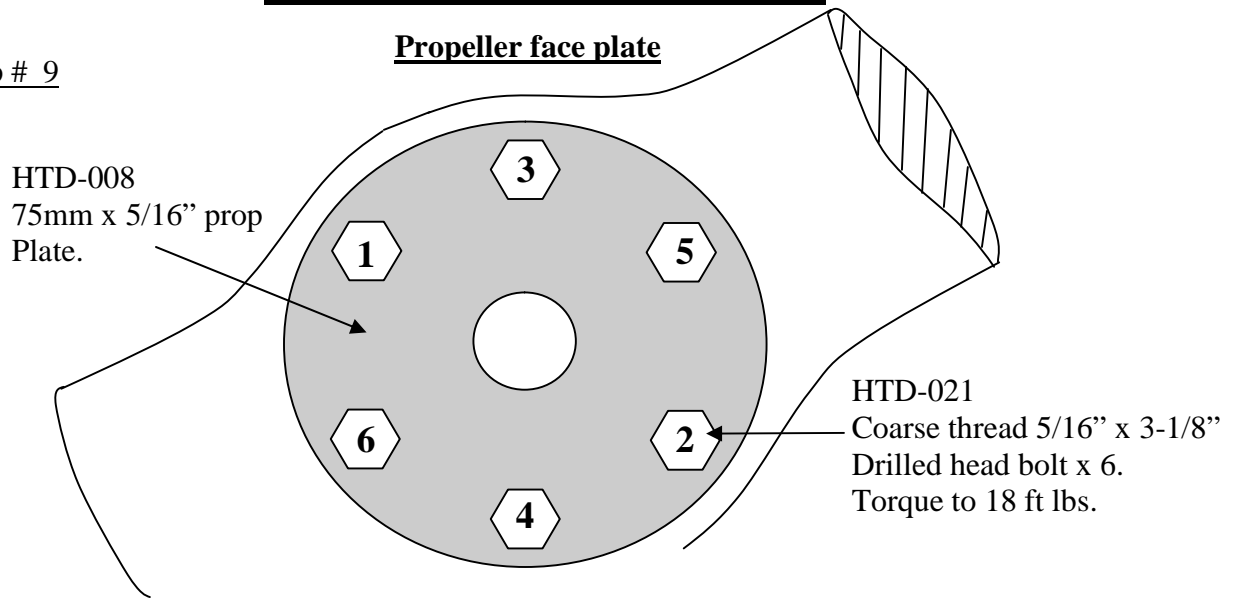


Install Propeller and prop plate with the 6 coarse thread 5/16 bolts (drilled head) provided. Be sure that the flat side of the prop is to the rear and the airfoil side of the prop is to the front. Tighten propeller bolts to (18 ft lbs.). **Tighten in sequence indicated above.** Try to tighten prop bolts equally to prevent propeller from being pulled out of 'track'. Safety wire prop (reference below) with wire provided. Since prop bolts are 'safetied', you need not use Loc-tite on threads.

CAUTION:

Before running engine, see Rotax engine manual and proper break-in procedure.

Safety wire reference

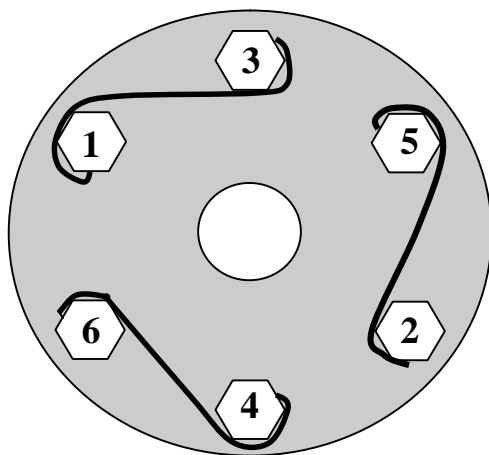

Bolt loosens by unscrewing to the left

