
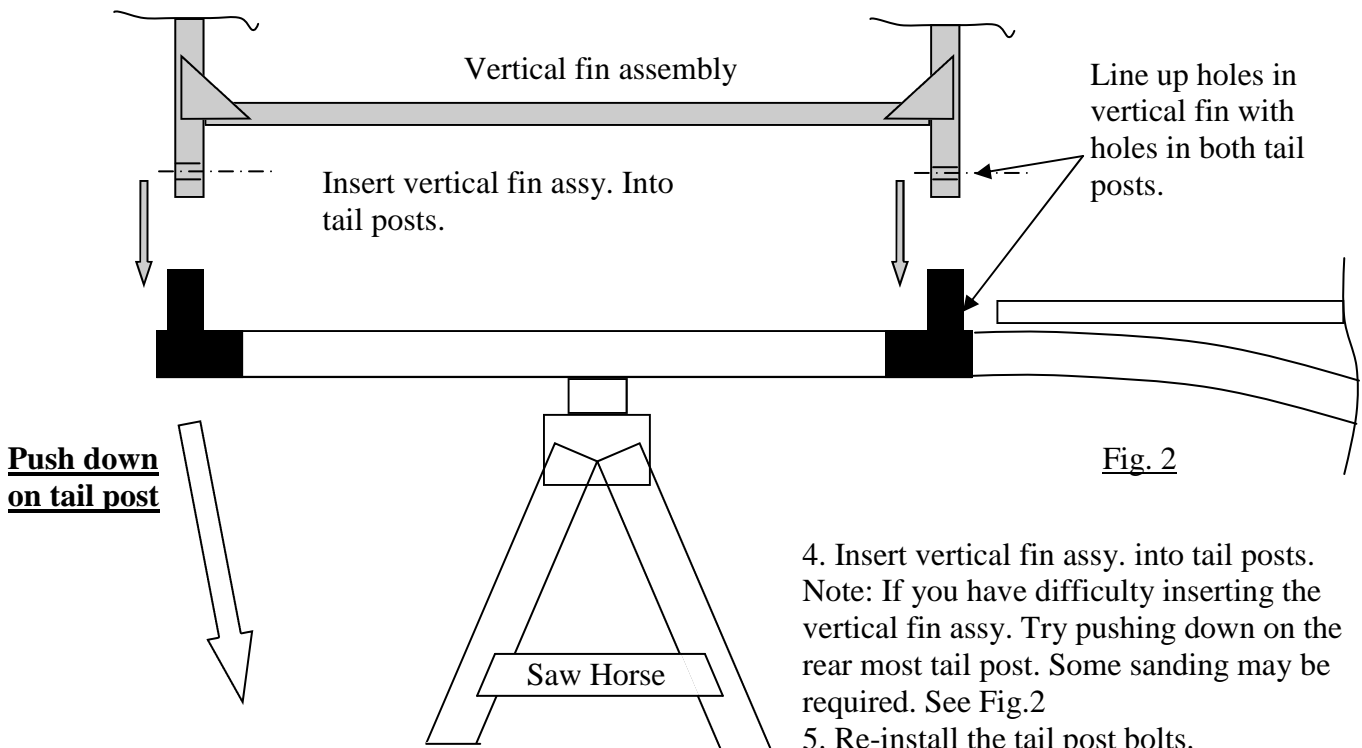


How to install Vertical Fin

NOTE: This procedure must be done BEFORE attaching the FG-99 gussets to rear of the fuselage.

1. Apply some lithium grease evenly on the inside of the tail posts
2. Place a saw horse between the two tail posts, about halfway.
3. Remove factory installed FB-11 retaining bolt and AN4-15a bolt in tail posts. See fig. 1

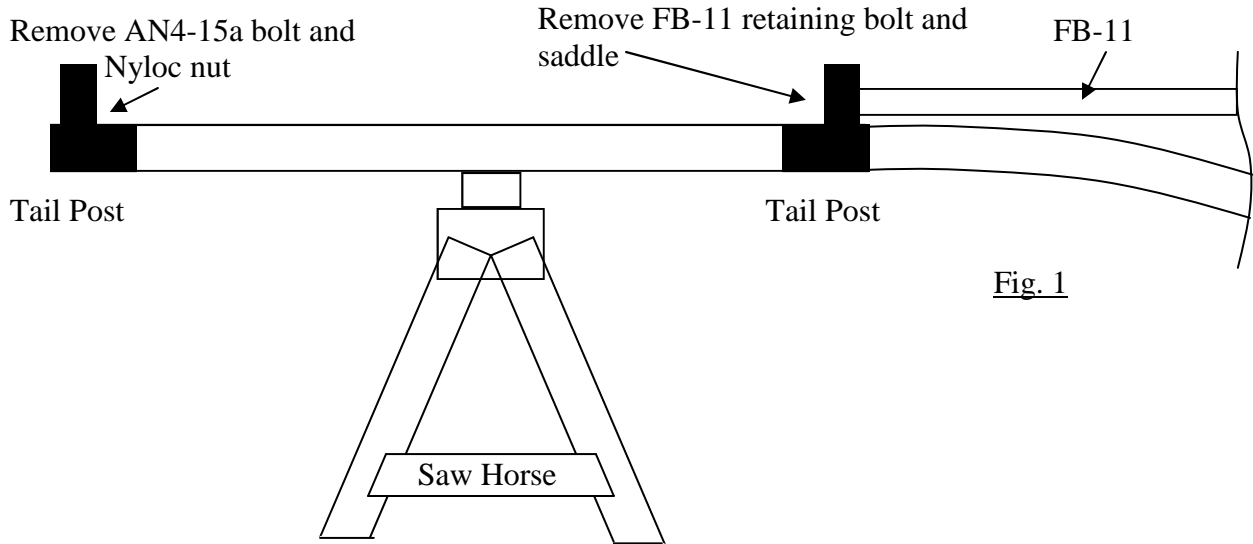

4. Insert vertical fin assy. into tail posts. Note: If you have difficulty inserting the vertical fin assy. Try pushing down on the rear most tail post. Some sanding may be required. See Fig.2
5. Re-install the tail post bolts.