


# Muffler Mount Assembly



*The following pictures depict the muffler mount assembly included with your kit. They are mostly self explanatory.*

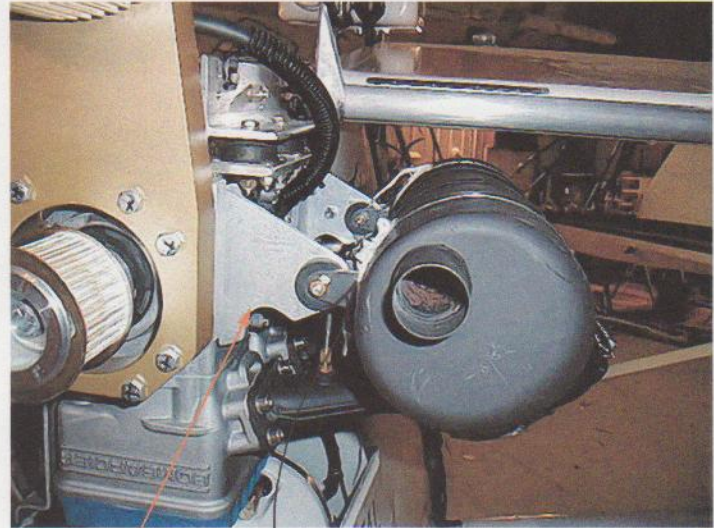

*use abrasion belts*

The mounting brackets face each other with the cutout down. Attach mounts with bolts and lock washers.

Remove bolts and rubber dampeners from U clamps. Install the U-clamps over the muffler clamps before sliding them over the muffler. (the clamps should be installed with tightener down.) Finish assembly by installing U-clamp to mounting bracket using rubber dampeners and hardware. Before tightening clamps install insulation under clamp. Tighten clamp to the point that you see the muffler start to bend in. (Do not over tighten inspect during pre-flight) **Note:** Be sure that the clamps wear shipped with split lock self locking nuts. Not ny-lock.

