


## How to attach tail surfaces to fuselage.

### Step 5

Remove hardware from stabilizer attach brackets (on vertical fin) and insert the stabilizers. Replace bolts, nuts, pins and black plastic washers. Repeat for remaining stabilizer.

NOTE: The kit is supplied with 4 Black plastic washers - PW-4. These are installed on the trailing edge attach point hardware (rear bracket) only.

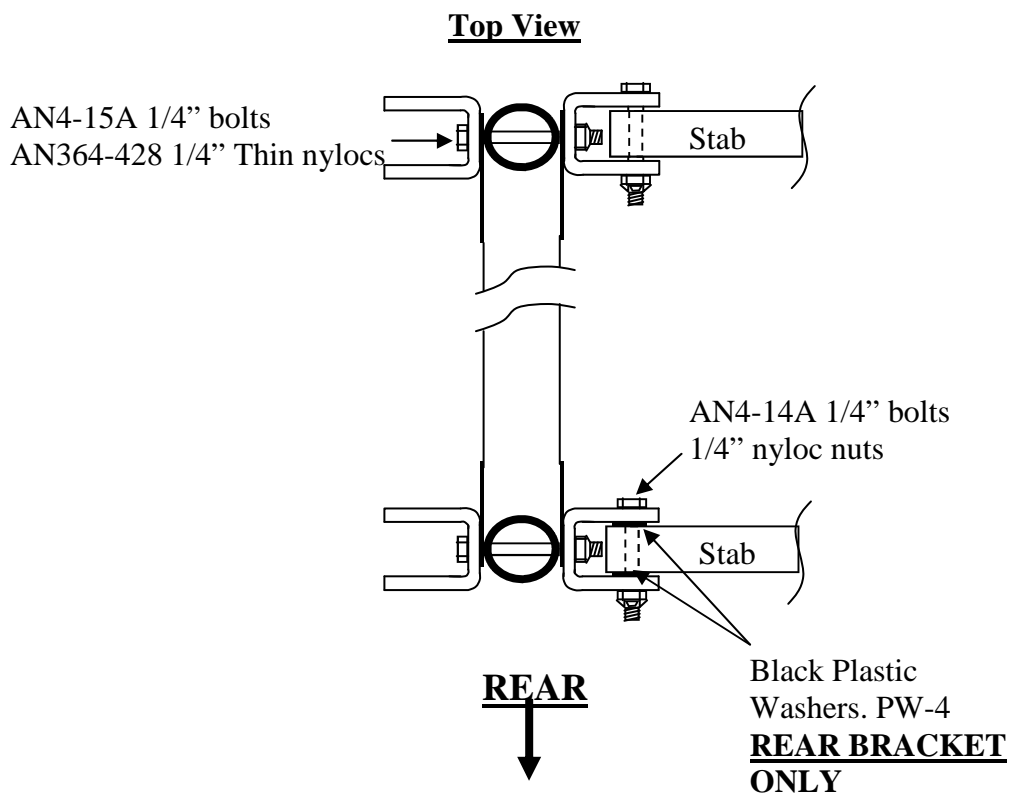

### Step 6

